

Installation and Operational Instructions for EAS[®]-Compact[®]

Ratchetting clutch, Type 49__0__ Sizes 01 to 3

Synchronous clutch, Type 49__5__ Sizes 01 to 3

(B.4.14.EN)

Please read these Operational Instructions carefully and follow them accordingly!

Ignoring these Instructions may lead to malfunctions or to clutch failure, resulting in damage to other parts.

Contents

- Page 1:** - Contents
- Page 2:** - Safety Regulations
- Safety and Guideline Signs
- Page 3:** - Clutch Illustrations (Variants)
- Page 4:** - Parts List
- Page 5:** - Technical Data, General
- Page 6:** - Screw Tightening Torques
- Technical Data Type 493.___.0
- Page 7:** - Technical Data Type 494.___.
- Page 8:** - Technical Data Type 496.___.0
- Page 9:** - Design
- Scope of Delivery / State of Delivery
- Function
- Page 10:** - Output Elements Installation
- Page 11:** - Cup Spring Layering
- Mounting onto the Shaft
- De-installation of the Cone Bushings and Shrink Disks
- Page 12:** - Shaft Installation via Key Connection
- Joining Both Clutch Hubs Type 493.___.0
- Joining Both Clutch Components Type 494.___.
- Joining Both Clutch Components Type 496.___.0
- Page 13:** - Permitted Shaft Misalignments
- Clutch Alignment
- Page 14:** - Torque Adjustment
- Page 15:** - Torque Adjustment for Standard Adjusting Nut
- Page 16:** - Torque Adjustment for Adjusting Nut with Radial Clamping
- Page 17:** - Limit Switch Installation
- Maintenance and Maintenance Intervals
- Disposal
- Page 18:** - Malfunctions / Breakdowns Type 490.___.
- Malfunctions / Breakdowns Type 493.___.0
- Page 19:** - Malfunctions / Breakdowns Type 494.___.
- Page 20:** - Malfunctions / Breakdowns Type 494.___.
- Page 21:** - Malfunctions / Breakdowns Type 496.___.0

Installation and Operational Instructions for EAS[®]-Compact[®]

Ratchetting clutch, Type 49__0_ Sizes 01 to 3

Synchronous clutch, Type 49__5_ Sizes 01 to 3

(B.4.14.EN)

Safety Regulations

These Installation and Operational Instructions (I + O) are part of the clutch delivery. Please keep them handy and near to the clutch at all times.



It is forbidden to start use of the product until you have ensured that all applicable EU directives, directives for the machine or system into which the product has been installed have been fulfilled.

At the time these Installation and Operational Instructions go to print, the EAS[®]-clutches accord with the known technical specifications and are operationally safe at the time of delivery.

Without a conformity evaluation, this product is not suitable for use in areas where there is a high danger of explosion. This statement is based on the ATEX directive.

CAUTION



- If the EAS[®]-clutches are modified.
- If the relevant standards for safety and / or installation conditions are ignored.

User-implemented Protective Measures

- Cover all moving parts to protect against seizure, dust or foreign body impact.
- The clutches may not be put into operation without a limit switch unless *mayr*[®] has been contacted and has agreed otherwise.

To prevent injury or damage, only professionals and specialists should work on the devices, following the relevant standards and directives. Please read the Installation and Operational Instructions carefully prior to installation and initial operation of the device.

These Safety Regulations are user hints only and may not be complete!

Safety and Guideline Signs

CAUTION



Danger of injury to personnel and damage to machines.



Please Observe!
Guidelines on important points.



According to German notation, decimal points in this document are represented with a comma (e.g. 0,5 instead of 0.5).

Installation and Operational Instructions for EAS[®]-Compact[®]

Ratchetting clutch, Type 49..._0... Sizes 01 to 3

Synchronous clutch, Type 49..._5... Sizes 01 to 3

(B.4.14.EN)

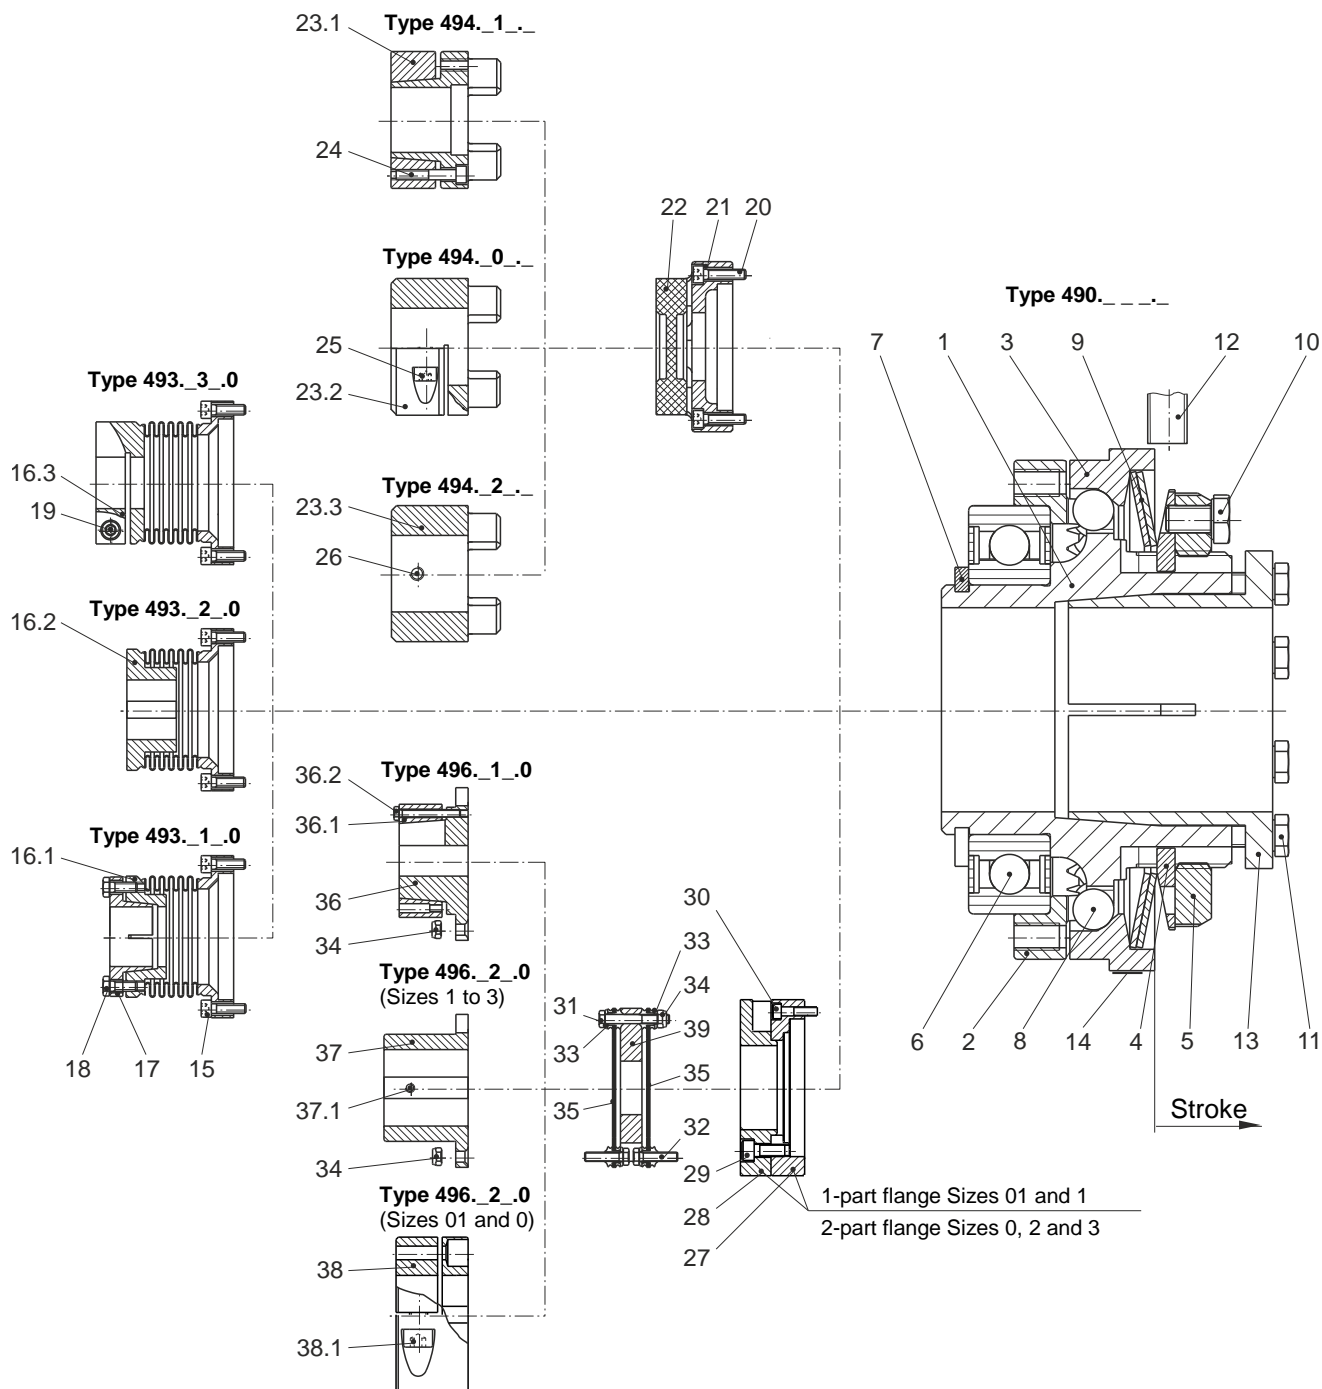


Fig. 1

Installation and Operational Instructions for EAS[®]-Compact[®]

Ratchetting clutch, Type 49...0. Sizes 01 to 3

Synchronous clutch, Type 49...5. Sizes 01 to 3

(B.4.14.EN)

Parts List

Parts List (Only use *mayr*[®] original parts)

Parts for Type 490.-:	
Item	Name
1	Hub
2	Pressure flange
3	Thrust washer
4	Locking ring
5	Adjusting nut
5.1	Adjusting nut (page 16 / Figs. 12/13)
6	Deep groove ball bearing
7	Locking ring
8	Steel ball
9	Cup spring
10	Hexagon head screw ¹⁾
10.1	Cap screw (page 16 / Figs. 12/13)
11	Hexagon head screw
12	Limit switch ²⁾
13	Cone bushing
14	Type tag
Additional parts for Type 493.-:	
Item	Name
15	Cap screw ¹⁾
16.1	Steel bellows with hub for cone bushing
16.2	Steel bellows with hub for key
16.3	Steel bellows with clamping hub
17	Cone bushing
18	Hexagon head screws
19	Cap screw

Additional parts for Type 494.-:	
Item	Name
20	Cap screw ¹⁾
21	Connection flange
22	Elastomeric element ³⁾
23.1	Shrink disk hub
23.2	Clamping hub
23.3	Key hub
24	Cap screw
25	Cap screw
26	Set screw
Additional parts for Type 496.-:	
Item	Name
27	Intermediate flange
28	Connection flange
29	Cap screw ¹⁾
30	Cap screw ¹⁾
31	Hexagon head screw
32	Hexagon head screw
33	Washer
34	Hexagon nut
35	Disk pack
36	Shrink disk hub
36.1	Shrink disk
36.2	Hexagon head screw
37	Key hub
37.1	Set screw
38	Clamping hub
38.1	Cap screw
39	Connection plate



¹⁾ Secure the screws Items 10, 15, 20, 29 and 30 with Loctite 243

²⁾ The limit switch Item 12 is not part of the standard scope of delivery

³⁾ Elastomeric element colours (hardness): red (98 Sh A), yellow (92 Sh A), green (64 Sh D)

Installation and Operational Instructions for EAS[®]-Compact[®]

Ratchetting clutch, Type 49_.._0_ Sizes 01 to 3

Synchronous clutch, Type 49_.._5_ Sizes 01 to 3

(B.4.14.EN)

General Technical Data

Table 1

Size	Limit torque for overload M_G				Max. speed [rpm]
	Type 490.5_.._ [Nm]	Type 490.6_.._ [Nm]	Type 490.7_.._ [Nm]	Type 490.8_5_ ¹⁾ [Nm]	
01	5 – 12,5	10 – 25	20 – 50	25 – 62,5	4000
0	10 – 25	20 – 50	40 – 100	50 – 125	3000
1	20 – 50	40 – 100	80 – 200	100 – 250	2500
2	40 – 100	80 – 200	160 – 400	200 – 500	2000
3	70 – 175	140 – 350	280 – 700	350 – 875	1200

¹⁾ Only available in synchronous design, max. speed = 250 rpm.

Table 2

Size	Thrust washer (Fig. 1; Item 3) stroke on overload [mm]	Bore from – to	
		Hub (1) with cone bushing (13) $\varnothing d$ [mm]	Hub (1) with keyway $\varnothing d_p$ [mm]
01	1,2	10 – 20	12 – 20
0	1,5	15 – 25	15 – 25
1	1,8	22 – 35	22 – 30
2	2,0	32 – 45	28 – 40
3	2,2	35 – 55	32 – 50

Table 3

Size	Type 49_.._5_		Type 49_.._6_		Type 49_.._7_		Type 49_.._8_5_	
	Maximum torque M_G [Nm]	Inspection dimension "a" ²⁾ (Figs. 11/12) at approx. 70 % M_G [mm]	Maximum torque M_G [Nm]	Inspection dimension "a" ²⁾ (Figs. 11/12) at approx. 70 % M_G [mm]	Maximum torque M_G [Nm]	Inspection dimension "a" ²⁾ (Figs. 11/12) at approx. 70 % M_G [mm]	Maximum torque M_G [Nm]	Inspection dimension "a" ²⁾ (Figs. 11/12) at approx. 70 % M_G [mm]
01	12,5	5,7 (10,7)	25	6,5 (11,5)	50	8,1 (13,1)	62,5	8,9 (13,9)
0	25	5,9 (10,9)	50	6,9 (11,9)	100	8,9 (13,9)	125	9,9 (14,9)
1	50	5,8 (12,8)	100	7,0 (14,0)	200	9,4 (16,4)	250	10,6 (17,6)
2	100	7,9 (12,9)	200	9,3 (14,3)	400	12,1 (17,1)	500	13,5 (18,5)
3	175	7,0 (15,0)	350	8,8 (16,8)	700	12,5 (20,5)	875	14,3 (22,3)

²⁾ The values in brackets are valid for adjusting nuts with radial clamping (optional / page 16).

Table 4

Size	Max. permitted bearing loads				Permitted ambient temperature
	Axial forces [N]	Radial forces [N]		Transverse force torques ³⁾ [Nm]	
		1-bearing design	2-bearing design		
01	650	650	1000	5	-20 °C to +80 °C
0	1000	1000	1500	10	-20 °C to +80 °C
1	1500	1500	2250	20	-20 °C to +80 °C
2	2400	2400	3600	30	-20 °C to +80 °C
3	4200	4200	6300	40	-20 °C to +80 °C

³⁾ Torques, which put strain on the deep groove ball bearing due to the non-centric axial forces having an effect on the pressure flange.

Installation and Operational Instructions for EAS[®]-Compact[®]

Ratchetting clutch, Type 49...0... Sizes 01 to 3

Synchronous clutch, Type 49...5... Sizes 01 to 3

(B.4.14.EN)

Table 5

Size	Screw tightening torques ⁴⁾ [Nm]												
	Item 11	Item 15	Item 18	Item 19	Item 20	Item 24	Item 25	Item 29	Item 30	Item 31	Item 32	Item 36.2	Item 38.1
01	4	4,5	3	10	2,9	6	10	-	4,5	8,5	8,5	6	33
0	4	9,5	5	18	5,8	6	25	17,4	9,5	8,5	8,5	6	33
1	4	16	9,5	18	10,1	10	25	-	16	8,5	8,5	6	-
2	8	16	17	43	16	25	70	42	16	14	14	8,5	-
3	12	40	17	87	40	30	120	83	40	35	35	10	-

⁴⁾ Secure Items 15, 20, 29 and 30 using Loctite 243.

Technical Data Type 493...0

Table 6

Size	Shaft misalignment steel bellows coupling Type 493.-			Nominal torque T_{KN} steel bellows coupling Type 493.- [Nm]	Bores steel bellows side		
	Axial ΔK_a [mm]	Radial ΔK_r [mm]	Angular ΔK_w [°]		Type 493.1... [mm]	Type 493.2... [mm]	Type 493.3... [mm]
01	0,4	0,15	2	50	9 – 20	9 – 20	12 – 25
0	0,6	0,15	2	100	12 – 25	12 – 25	15 – 32
1	0,8	0,20	2	200	15 – 35	15 – 35	25 – 42
2	1,0	0,25	2	350	22 – 42	22 – 42	30 – 45
3	1,0	0,30	2	600	32 – 50	32 – 50	35 – 55

Table 7

Size	Transmittable torques [Nm] on clamping hubs frictional locking (Type 493.3_0) - dependent on bore - suitable for tolerance constellation H7/h6																					
	Ø 12	Ø 13	Ø 14	Ø 15	Ø 16	Ø 17	Ø 18	Ø 19	Ø 20	Ø 21	Ø 22	Ø 23	Ø 24	Ø 25	Ø 26	Ø 27	Ø 28	Ø 29	Ø 30	Ø 31	Ø 32	Ø 33
01	21	23	24	25	25	25	25	25	25	25	25	25	25	25	-	-	-	-	-	-	-	-
0	-	-	-	38	40	43	45	47	49	50	50	50	50	50	50	50	50	50	50	50	50	-
1	-	-	-	-	-	-	-	-	-	-	-	-	-	63	65	67	69	71	73	75	77	79
2	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	133	136	140	144
3	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Size	Ø 34	Ø 35	Ø 36	Ø 37	Ø 38	Ø 39	Ø 40	Ø 41	Ø 42	Ø 43	Ø 44	Ø 45	Ø 46	Ø 47	Ø 48	Ø 49	Ø 50	Ø 51	Ø 52	Ø 53	Ø 54	Ø 55
01	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
0	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
1	82	83	85	87	89	91	93	95	97	-	-	-	-	-	-	-	-	-	-	-	-	-
2	147	151	155	158	162	166	169	173	176	180	183	187	-	-	-	-	-	-	-	-	-	-
3	-	250	256	262	268	274	280	286	292	298	304	309	315	321	327	332	338	344	349	350	350	350

Installation and Operational Instructions for EAS[®]-Compact[®]

Ratchetting clutch, Type 49...0... Sizes 01 to 3

Synchronous clutch, Type 49...5... Sizes 01 to 3

(B.4.14.EN)

Technical Data Type 494..._..._

Table 8

Size	Bore lastic-side from – to			Nominal and maximum torques flexible backlash-free shaft coupling T_{KN} and $T_{K max.}$					
	Clamping hub Type 494...0... [mm]	Shrink disk hub Type 494...1... [mm]	Key hub Type 494...2... [mm]	Type 494...3 (yellow elastomeric element 92 Sh A)		Type 494...4 (red elastomeric element 98 Sh A)		Type 494...6 (green elastomeric element 64 Sh D)	
				T_{KN} [Nm]	$T_{K max.}$ [Nm]	T_{KN} [Nm]	$T_{K max.}$ [Nm]	T_{KN} [Nm]	$T_{K max.}$ [Nm]
01	15 – 28	15 – 28	8 – 28	35	70	60	120	75	150
0	19 – 35	19 – 38	10 – 38	95	190	160	320	200	400
1	20 – 45	20 – 45	12 – 45	190	380	325	650	405	810
2	28 – 50	28 – 50	14 – 55	265	530	450	900	560	1120
3	35 – 55	35 – 60	20 – 60	310	620	525	1050	655	1310

Table 9

Size	Transmittable torques [Nm] on clamping hubs frictional locking (Type 494...0... / $\varnothing d_3$) / on shrink disk hubs frictional locking (Type 494...1... / $\varnothing d_4$) – dependent on bore - suitable for tolerance constellation F7/k6 for clamping hubs and H7/k6 for shrink disk hubs																					
	$\varnothing 15$		$\varnothing 16$		$\varnothing 19$		$\varnothing 20$		$\varnothing 22$		$\varnothing 24$		$\varnothing 25$		$\varnothing 28$		$\varnothing 30$		$\varnothing 32$		$\varnothing 35$	
	d_3	d_4	d_3	d_4	d_3	d_4	d_3	d_4	d_3	d_4	d_3	d_4	d_3	d_4	d_3	d_4	d_3	d_4	d_3	d_4	d_3	d_4
01	34	56	36	62	43	81	45	87	50	100	54	120	57	125	63	135	-	-	-	-	-	-
0	-	-	-	-	79	141	83	153	91	177	100	203	104	216	116	256	124	282	133	308	145	343
1	-	-	-	-	-	-	83	197	91	228	100	261	104	279	116	332	124	368	133	405	145	460
2	-	-	-	-	-	-	-	-	-	-	-	-	-	-	208	300	228	350	248	400	280	500
3	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	350	450

Size	$\varnothing 38$		$\varnothing 40$		$\varnothing 42$		$\varnothing 45$		$\varnothing 48$		$\varnothing 50$		$\varnothing 52$		$\varnothing 55$		$\varnothing 58$		$\varnothing 60$	
	d_3	d_4	d_3	d_4	d_3	d_4	d_3	d_4	d_3	d_4	d_3	d_4	d_3	d_4	d_3	d_4	d_3	d_4	d_3	d_4
01	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
0	-	373	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
1	158	513	166	547	174	577	187	617	-	-	-	-	-	-	-	-	-	-	-	-
2	315	600	340	680	365	730	404	790	442	850	470	880	-	-	-	-	-	-	-	-
3	390	500	420	600	455	720	505	850	560	1000	600	1180	640	1270	705	1353	-	1428	-	1471

Table 10

Size	Shaft misalignments flexible coupling Type 494.								Dimension "E" (Fig. 6) [mm]	Locking set screw (26) for hub (Item 23.3 / Fig. 1)	
	Axial ΔK_a [mm]	Radial ΔK_r			Angular ΔK_w			Thread		Tightening torque [Nm]	
		92 Sh A [mm]	98 Sh A [mm]	64 Sh D [mm]	92 Sh A [°]	98 Sh A [°]	64 Sh D [°]				
01	1,4	0,14	0,10	0,07	1,0	0,9	0,8	18	M5	2	
0	1,5	0,15	0,11	0,08	1,0	0,9	0,8	20	M6	4,1	
1	1,8	0,17	0,12	0,09	1,0	0,9	0,8	24	M8	8,5	
2	2,0	0,19	0,14	0,1	1,0	0,9	0,8	26	M8	8,5	
3	2,1	0,21	0,16	0,11	1,0	0,9	0,8	28	M8	8,5	

Installation and Operational Instructions for EAS[®]-Compact[®]

Ratchetting clutch, Type 49..._0... Sizes 01 to 3

Synchronous clutch, Type 49..._5... Sizes 01 to 3

(B.4.14.EN)

Technical Data Type 496..._..._0

Table 11

Size	Bore torsionally rigid side from – to			Nominal torque T_{KN} and peak torque T_{KS} for torsionally rigid backlash-free shaft coupling	
	Shrink disk hub Type 496..._1..._0 [mm]	Key hub Type 496..._2..._0 [mm]	Clamping hub with keyway Type 496..._2..._0 [mm]	Type 496..._..._0	
				T_{KN} [Nm]	T_{KS} [Nm]
01	19 – 38	–	19 – 35	100	150
0	25 – 45	–	25 – 42	150	225
1	25 – 45	16 – 32	–	300	450
2	40 – 60	25 – 50	–	650	975
3	45 – 70	30 – 55	–	1100	1650

Table 12

Size	Transmittable torques [Nm] on shrink disk hubs frictional locking (Type 496..._1..._0) - dependent on bore - suitable for tolerance constellation H7/g6																			
	Ø 19	Ø 20	Ø 22	Ø 24	Ø 25	Ø 28	Ø 30	Ø 32	Ø 35	Ø 38	Ø 40	Ø 42	Ø 45	Ø 48	Ø 50	Ø 52	Ø 55	Ø 60	Ø 65	Ø 70
01	150	150	150	150	150	150	150	150	150	150	-	-	-	-	-	-	-	-	-	-
0	-	-	-	-	225	225	225	225	225	225	225	225	225	-	-	-	-	-	-	-
1	-	-	-	-	339	404	448	492	558	620	659	694	738	-	-	-	-	-	-	-
2	-	-	-	-	-	-	-	-	-	-	873	937	1036	1132	1195	1255	1338	1454	-	-
3	-	-	-	-	-	-	-	-	-	-	-	-	1268	1394	1480	1565	1691	1890	2065	2204

Table 13

Size	Max. permitted shaft misalignments for torsionally rigid coupling Type 496..._..._0			Locking set screw (37.1) for hub (Item 37 / Fig. 1)	
	Axial ΔK_a ⁵⁾ [mm]	Radial ΔK_r [mm]	Angular ΔK_w [°]	Thread	Tightening torque [Nm]
01	0,9	0,2	2,0	-	-
0	1,1	0,2	2,0	-	-
1	0,8	0,2	1,4	M5 ($\varnothing d_p \leq 22$) - M6 ($\varnothing d_p > 22$)	2 / 4,1
2	1,1	0,25	1,4	M6	4,1
3	1,3	0,3	1,4	M8	8,5

⁵⁾ Only permitted as a static or virtually static value.

Installation and Operational Instructions for EAS[®]-Compact[®]

Ratchetting clutch, Type 49__0_ Sizes 01 to 3

Synchronous clutch, Type 49__5_ Sizes 01 to 3

(B.4.14.EN)

Design

The EAS[®]-Compact[®] clutch is designed as a mechanical overload clutch according to the ball-detent principle.

Scope of Delivery / State of Delivery

- The clutch is manufacturer-assembled ready for installation.
- The torque is set manufacturer-side according to the customer's request (please compare the torque stipulated in the order with the torque imprinted/engraved in the identification).

Unless the customer requests a particular torque setting when ordering, the clutch will be pre-set to approx. 70 % of the maximum torque.

The hexagon head screw (10) is not secured with Loctite on a pre-set clutch. Before initial operation of the clutch, please secure the hexagon head screw (10) with Loctite 243.

Please check the scope of delivery according to the Parts List as well as the state of delivery immediately after receiving the goods.

mayr[®] will take no responsibility for belated complaints.

Please report transport damage immediately to the deliverer.

Please report incomplete delivery and obvious defects immediately to the manufacturer.

Function

The clutch protects the drive line from excessively high, unpermitted torque impacts which can occur due to unintentional blockages.

Function in normal operation

The EAS[®]-Compact[®] clutch transfers the torque from a drive shaft onto an output element which can be mounted onto the clutch ball bearing-supported pressure flange (2).

The torque transmission takes place backlash-free for the entire lifetime of the clutch.

The clutch Types 493., 494. und 496. connect two shafts and compensate for shaft misalignment.

Function in case of overload

If the set limit torque is exceeded (overload), the clutch disengages, the thrust washer (3) carries out an axial hub movement, a customer-side mounted limit switch (12) senses this stroke movement and emits a signal to switch off the drive.

The residual torque is approx. 5 to max. 15 % of the set torque.

This means that the EAS[®]-Compact[®] clutch is not load holding.

Once the overload is removed, the clutch becomes automatically ready for operation again on reaching an engagement position.

Re-engagement:

The ratchetting division on the EAS[®]-Compact[®] ratchetting clutch Type 49__0_ is 15°

The ratchetting division on the EAS[®]-Compact[®] synchronous clutch Type 49__5_ is 360°

Installation and Operational Instructions for EAS[®]-Compact[®]

Ratchetting clutch, Type 49__0__

Sizes 01 to 3

Synchronous clutch, Type 49__5__

Sizes 01 to 3

(B.4.14.EN)

Output Elements Installation

The output element is centred on a deep groove ball bearing (6) (tolerance H7/h5) and bolted together with the pressure flange (2).



Please observe the maximum permitted screw-in depth in the pressure flange (2) as well as the connection dimensions "a" and "e" for the output elements, see Figs. 3 or 4 and Table 14.

If the resulting radial force from the output element is anywhere near the centre of the ball bearing (6) and under the max. permitted radial load acc. Table 4, an additional bearing for the output element is not necessary.

No appreciable axial forces (see Table 4) should be transferred from the output element onto the clutch pressure flange (2).

The EAS[®]-Compact[®] with a long protruding hub (Type 490__1 / Fig. 2) is recommended for extremely wide output elements, or for elements with small diameters. On very small diameters, the output element is screwed together with the clutch pressure flange (2) via a customer-side intermediate flange.

In case of increased radial forces, a 2-bearing design (Type 490__2 / Fig. 2) should be used.

Example:

Type 490.61__1

Type 490.61__2

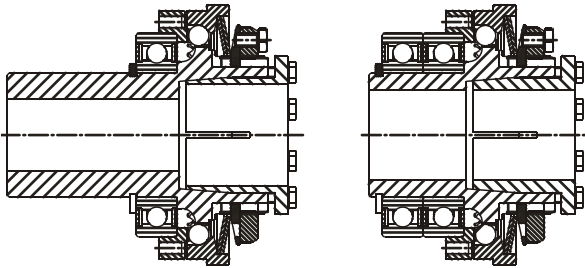


Fig. 2

Ball bearings, needle bearings or bearing bushings are suitable as bearings for the output element, depending on the installation situation and the installation space.

Please ensure that the output element bearing is designed as a fixed bearing (Fig. 4).

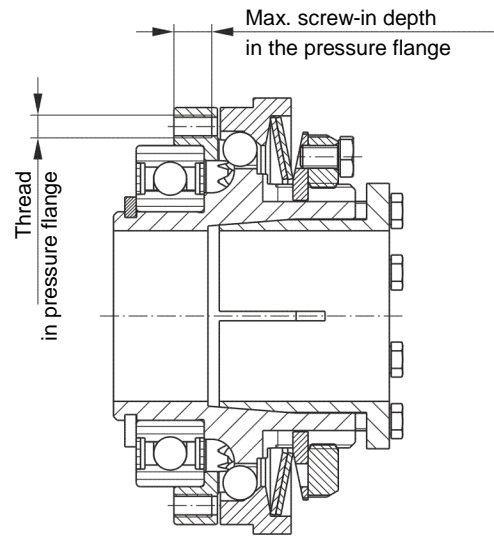


Fig. 3

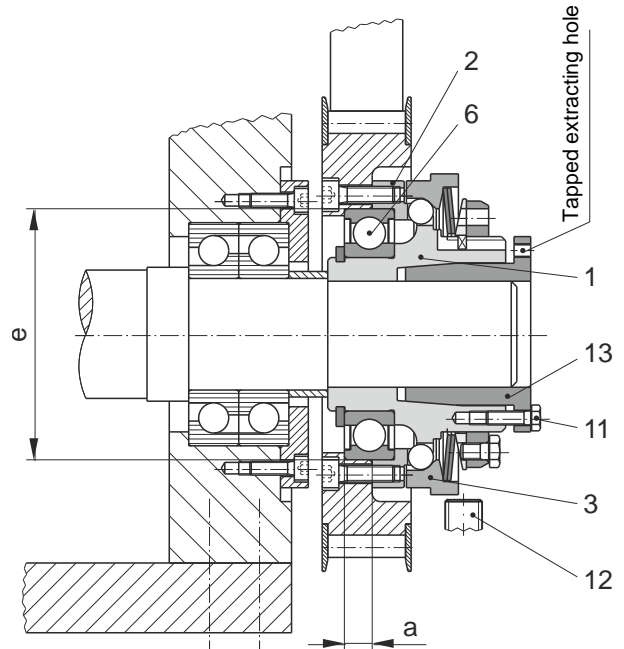


Fig. 4

Table 14

Size	Thread in the pressure flange (Fig. 3) with required screw quality and tightening torque for the customer-side screw connection	Max. screw-in depth [mm] in the pressure flange (Fig. 3)	Connection dimensions [mm] (Fig. 4)	
			a ^{+0,1}	e ^{H7/h5}
01	8 x M4 / 8.8 / 2,6 Nm	6	5	47
0	8 x M5 / 8.8 / 5,1 Nm	7	7	62
1	8 x M6 / 8.8 / 9 Nm	9	9	75
2	8 x M6 / 12.9 / 16 Nm	10	10	90
3	8 x M8 / 12.9 / 40 Nm	12	10	100

Installation and Operational Instructions for EAS[®]-Compact[®]

Ratchetting clutch, Type 49_._0_

Sizes 01 to 3

Synchronous clutch, Type 49_._5_

Sizes 01 to 3

(B.4.14.EN)

Cup Spring Layering (Fig. 5)

Correct cup spring layering is a prerequisite for problem-free clutch function and torque adjustment.


For the lower torque range, **one** cup spring (Type 49_5_._.),

for the medium torque range, **two** cup springs (Type 49_6_._.),

for the high torque range, **four** cup springs (Type 49_7_._.),


and for the maximum torque range **five** cup springs (Type 49_8_5_.) are installed.

1x layered

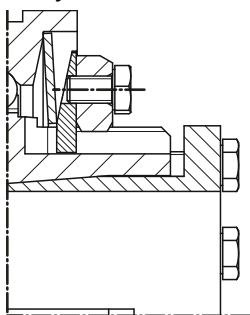


Type 49_5_._.

2x layered

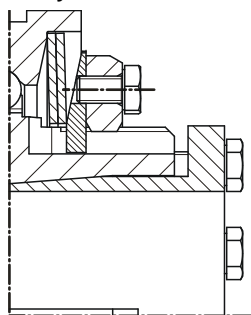


Type 49_6_._.

4x layered

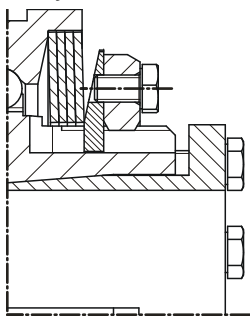

Type 49_7_._.

5x layered

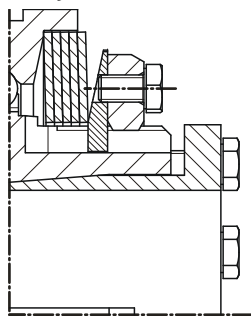

Type 49_8_5_.

Fig. 5

Mounting onto the Shaft

EAS[®]-Compact[®] clutches include cone bushings, shrink disks, clamping hubs or keyways as part of the standard delivery.

During installation of cone bushings, shrink disks or clamping hubs, please observe the following:

- Recommended shaft tolerance for cone bushings: h6
 - Recommended shaft tolerance for clamping hubs: h6
 - Recommended shaft tolerance for shrink disk hubs: g6
 - Shaft surface: finely turned or ground (Ra = 0,8 µm).
 - Shaft material: yield point at least 400 N/mm², e.g. C45 +QT, 42CrMoS4 +QT.
 - Degrease or remove conserving layers on the shafts and bores before installing the clutch.
- Greasy or oily bores or shafts do not transmit the torques defined in the catalogue.**
- Mount the clutch or clutch hubs onto both shaft ends using a suitable device and bring it / them into the correct position.
 - Tighten the tensioning screws (11) of the cone bushing (13) in 2 steps cross-wise and then in 3 to max. 6 tightening sequences evenly using a torque wrench to the torque stated in Table 5.
 - Type 494.-: Tighten the tensioning screws (24) in the shrink disks (23.1) stepwise (in 3 to max. 6 tightening sequences) and cross-wise evenly using a torque wrench to the torque stated in Table 5.
 - Type 496.-: Tighten the tensioning screws (36.2) in the shrink disks (36.1) using a torque wrench evenly and one after the other in max. 6 sequences to the torque stated in Table 5.
 - The transmittable torques of the shaft-hub connection are dependent on the bore diameter and the quality of the drive shafts used. Please observe the respective transmission tables in the valid and applicable product catalogue.



The clutch or clutch hub carries out an axial movement in the direction of the cone bushing (13) when tightening the cone bushing (13). Because of this effect, please ensure that on the EAS[®]-Compact[®] clutch with steel bellows (Type 493_._0), first one cone bushing is completely tightened (e.g. Item 13), then the other (steel bellows) side (Item 17, page 3). Please also ensure during installation of Type 493_._0 that no axial pressure is placed on the steel bellows (can cause damage).

De-installation of the Cone Bushings and Shrink Disks

In the cone bushings and the shrink disks, there are tapped extracting holes next to the tensioning screws.

- 1) Loosen all tensioning screws by several thread turns.
- 2) Screw out the tensioning screws located next to the tapped extracting holes and screw them into the tapped extracting holes up to their limits.
Then tighten these screws until the tensioning connection loosens.

Installation and Operational Instructions for EAS[®]-Compact[®]

Ratchetting clutch, Type 49___.0.

Sizes 01 to 3

Synchronous clutch, Type 49___.5.

Sizes 01 to 3

(B.4.14.EN)

Shaft Installation via Key Connection

On the EAS[®]-Compact[®] with a keyway, the clutch must be axially fixed onto the shaft after mounting, e.g.

- with a press cover and a screw, screwed into the shaft threaded centre hole (for Types 490.2 and 493.2.0)
- and/or a locking set screw (for Types 494.2 and 496.2.0):
 - ➔ Locking set screw (26) for hub (23.3), see Fig. 1 on page 3 and table 10 on page 7,
 - ➔ Locking set screw (37.1) for hub (37), see Fig. 1 on page 3 and table 13 on page 8,

Joining Both Clutch Hubs (Items 1 / 16) for Type 493.0 (Fig. 1)



When mounting the hubs (1 and 16), the joining force must not be transferred via the steel bellows
=> **danger of bellows deformation.**

Joining Both Clutch Components (1/23) for Type 494. (Figs. 1 and 6)

The flexible elastomeric element (22) is pre-tensioned between the metal claws by joining components 23.1/23.2/23.3 with component 21. To do this, an axial installation force is required. The force required can be reduced by lightly greasing the elastomeric element.



Use PU-compatible lubricants (e. g. Mobilith SHC460)!
No unpermitted high axial pressure should be placed on the elastomeric element (22) in completely assembled condition.
Keep to distance dimension "E" acc. Fig. 6 and Table 10!

Joining Both Clutch Components for Type 496.0 (Fig. 1)

Join the misalignment-flexible part and the overload clutch and screw together with cap screws (Item 30) to the tightening torque given in Table 5.

The cap screws (Item 30) must be protected using a screw-securing product, e.g. Loctite 243.



The clutch or clutch hub carries out an axial movement in the direction of the cone bushing (Item 13) when tightening the cone bushing (13).
Because of this effect, please ensure that on the EAS[®]-Compact[®] clutch with disk pack (Type 496.0), first the cone bushing (13) is completely tightened, then the other (disk pack) side.

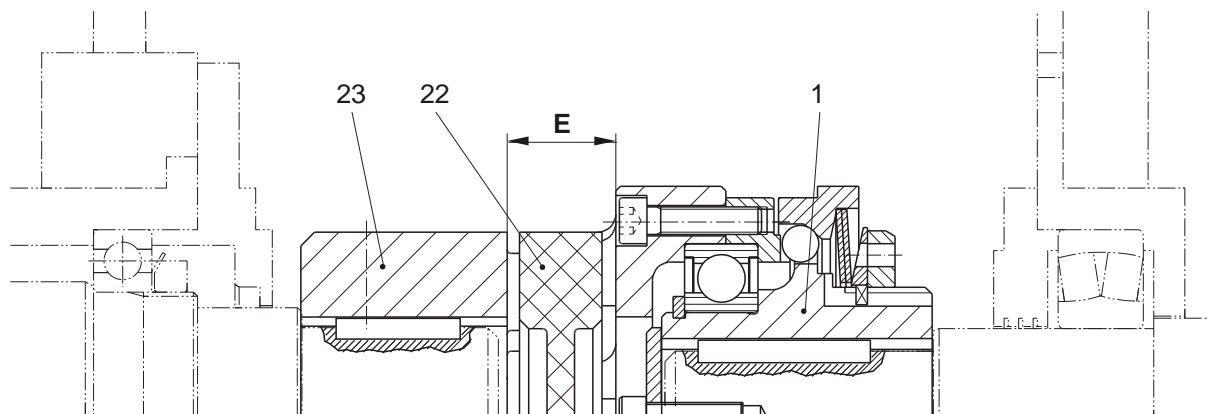


Fig. 6

Installation and Operational Instructions for EAS[®]-Compact[®]

Ratchetting clutch, Type 49...0... Sizes 01 to 3

Synchronous clutch, Type 49...5... Sizes 01 to 3

(B.4.14.EN)

Permitted Shaft Misalignments

The EAS[®]-Compact[®] clutches Types 494... (lastic backlash-free), 493...0 (with steel bellows) and 496...0 (torsionally rigid backlash-free) compensate for radial, axial and angular shaft misalignments (Fig. 7) without losing their backlash-free function. However, the Type-specific permitted shaft misalignments indicated in Tables 6, 10 and 13 must not simultaneously reach their maximum value.

If more than one kind of misalignment takes place simultaneously, they influence each other. This means that the permitted misalignment values are dependent on one another, see Fig. 8.

The sum total of the actual misalignments in percent of the maximum value must not exceed 100 %.

The permitted misalignment values given in Tables 6, 10 and 13 refer to clutch operation at nominal torque, an ambient temperature of +30 °C and an operating speed of 1500 rpm. If the clutch is operated in other or more extreme operating conditions, please observe the dimensioning guidelines stated in the individual shaft coupling catalogues or contact the manufacturer.

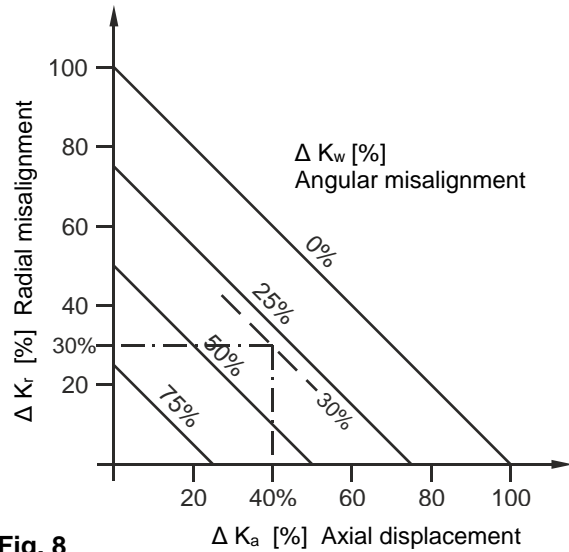



Fig. 8

Clutch Alignment

Exact alignment of the clutch improves the running smoothness of the drive line substantially, reduces the load on the shaft bearings and increases the clutch service lifetime.


We recommend alignment of the clutch using a dial gauge or special laser on drives operating at very high speeds.

Type 493...0 (with steel bellows)

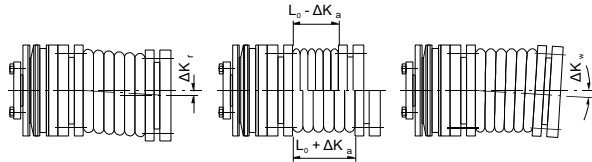


Radial misalignment Axial displacement Angular misalignment

Type 494... (lastic backlash-free)

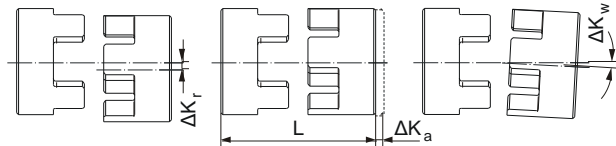

Radial misalignment Axial displacement Angular misalignment

Type 496...0 (torsionally rigid backlash-free)

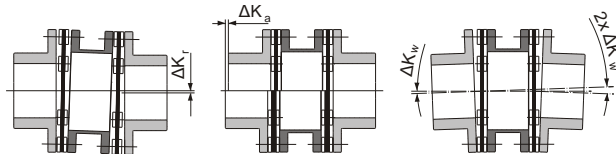

Radial misalignment Axial displacement Angular misalignment

Fig. 7

Example (Size 3 / Type 493...0):

Axial displacement occurrence $\Delta K_a = 0,4 \text{ mm}$ equals 40 % of the permitted maximum value $\Delta K_a = 1,0 \text{ mm}$.

Radial misalignment occurrence $\Delta K_r = 0,09 \text{ mm}$ equals 30 % of the permitted maximum value $\Delta K_r = 0,3 \text{ mm}$.

=> permitted angular misalignment $K_w = 30 \%$ of the maximum value $\Delta K_w = 2,0^\circ$ => $\Delta K_w = 0,6^\circ$

Torque Adjustment

In order to guarantee low-wear clutch operation, it is essential that the clutch torque is set to a sufficiently high service factor (overload torque to operating torque).

Our experience has shown that an **adjustment factor of 1,5 to 3** gives good results.

On very high load alternations, high accelerations and irregular operation, please set the adjustment factor higher.

The respective torque adjustment range is printed on the Type tag (14). Torque adjustment is carried out by turning the adjusting nut (5). The installed cup springs (9) are operated in the negative range of the characteristic curve (see Fig. 9); this means that a stronger pre-tensioning of the cup spring results in a decrease of the spring force.

The torque is set manufacturer-side according to the customer's request. If no particular torque adjustment is requested customer-side, the clutch will always be **pre-set and marked** (calibrated) to approx. 70 % of the maximum torque.



Adjusting the adjusting nut (5) or distorting the cup spring (9) outside of the cup spring characteristic curve (see Fig. 9) stops the clutch functioning.

The inspection dimension "a" (see Table 3) can show deviations due to construction tolerances or to clutch wear. After de-installing the clutch (e.g. due to cup spring replacement or changes to the cup spring layering), the clutch must be re-adjusted and calibrated using dimension "a" (see Table 3 and Figs. 11/12).

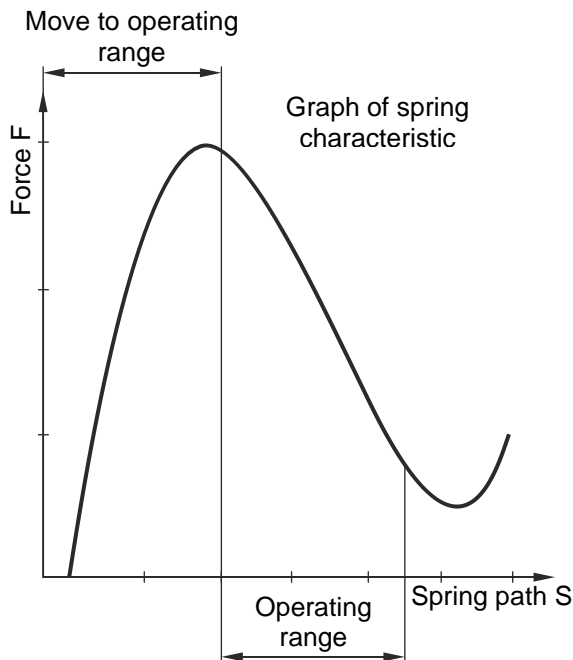


Fig. 9

Installation and Operational Instructions for EAS[®]-Compact[®]

Ratchetting clutch, Type 49 _ _ 0. _ Sizes 01 to 3

Synchronous clutch, Type 49 _ _ 5. _ Sizes 01 to 3

(B.4.14.EN)

The following applies to standard adjusting nut:



Even if the customer does not intend to change the pre-set torque, the hexagon head screw (10) must still be screwed out customer-side, painted with Loctite 243 and screwed back in again.

It is possible to check the "Spring operation in the operating range" (Fig. 9) using the dimension "a" (distance from the adjusting nut (5) facing side to the thrust washer (3) facing side, as shown in Fig. 11).

Please see Table 3 for the respective values.



Turning the adjusting nut (5) clockwise causes a reduction in torque.
Turning it anti-clockwise causes an increase in torque.
You should be facing the adjusting nut (5) as shown in Fig. 10.

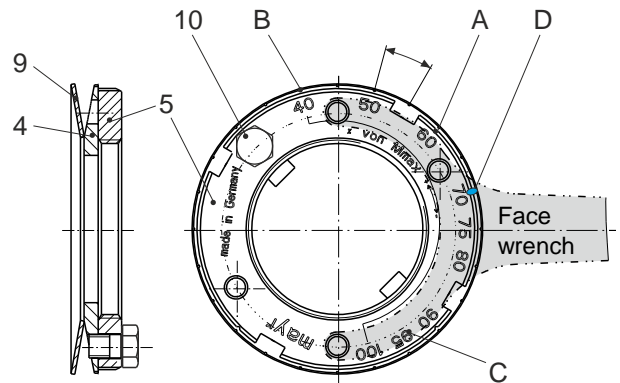


Fig. 10

Adjusting the torque for standard adjusting nut

- a) Please convert the required torque using the formula below into percent of the maximum adjustment value (see Table 3).

$$\frac{\text{Required torque adjustment}}{\text{max. adjustment value}} \times 100 = \text{Adjustment in \%}$$

- b) Loosen the hexagon head screw (10) in the adjusting nut (5).
c) Turn the adjusting nut (5) using the engraved adjustment scale (Fig. 10) clockwise or anti-clockwise using a hook or a face wrench until the required torque is reached.
d) The required torque results from the marking overlap (D) on the locking ring (4) and the percent value (C) on the adjusting nut (5), see Fig. 10.
e) Paint the hexagon head screw (10) with Loctite 243 and screw it into the adjusting nut (5); the 4 notches (A) in the adjusting nut (5) and the notches (B) in the locking ring (4) must be in the same position (Fig. 9). Correct slightly if necessary.

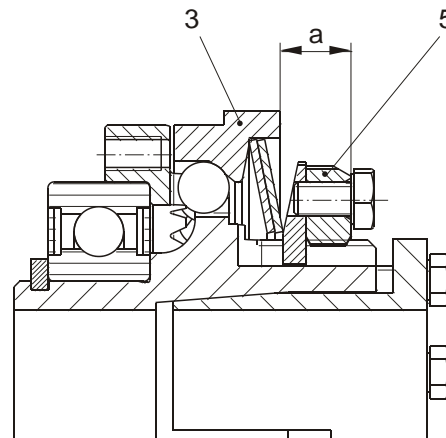


Fig. 11

Installation and Operational Instructions for EAS[®]-Compact[®]

Ratchetting clutch, Type 49 _ _ 0_ _

Sizes 01 to 3

Synchronous clutch, Type 49 _ _ 5_ _

Sizes 01 to 3

(B.4.14.EN)

The following applies to adjusting nut with radial clamping (option):

It is possible to check the "Spring operation in the operating range" (Fig. 9/ page 14) using the dimension "a" (distance from the adjusting nut (5.1) facing side to the thrust washer (3) facing side, as shown in Fig. 12).

Please see Table 3 for the respective values (values in brackets).



Turning the adjusting nut (5.1) clockwise causes a reduction in torque.
Turning it anti-clockwise causes an increase in torque.
You should be facing the adjusting nut (5.1) as shown in Fig. 13.

Adjusting the torque for adjusting nut with radial clamping

- a) Please convert the required torque using the formula below into percent of the maximum adjustment value (see Table 3).

Required torque adjustment	x 100 = Adjustment in %
max. adjustment value	

- b) Loosen the cap screw (10.1) in the adjusting nut (5.1).
c) Turn the adjusting nut (5.1) using the adjustment scale (10) engraved on the outer diameter clockwise or anti-clockwise using a hook wrench until the required torque is reached.
d) The required torque results from the marking overlap on the locking ring (4) and the percent value on the adjusting nut (5.1).
e) Paint the cap screw (10.1) with Loctite 243 and screw it into the adjusting nut (5.1) as protection against twisting using the tightening torque according to Table 15.

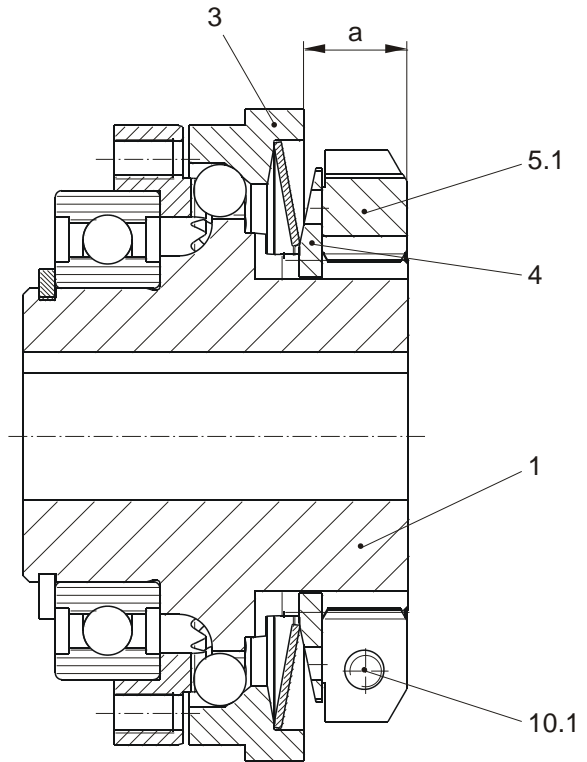


Fig. 12

Table 15

Size	Tightening torque Item 10.1
01	2,8 Nm
0	5,5 Nm
1	9,5 Nm
2	9,5 Nm
3	23 Nm

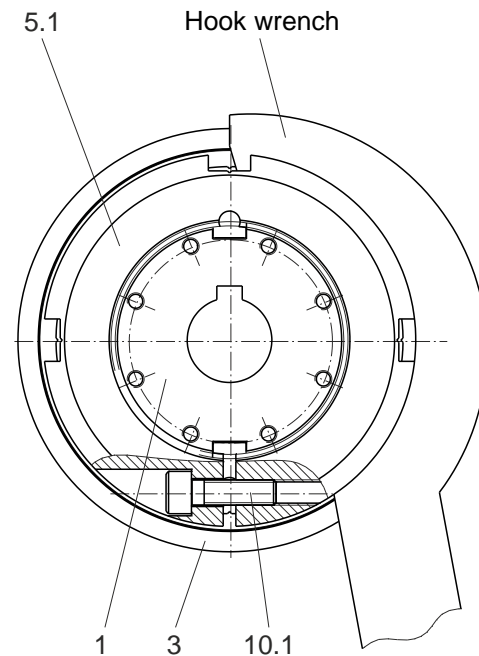


Fig. 13

Installation and Operational Instructions for EAS[®]-Compact[®]

Ratchetting clutch, Type 49...0.

Sizes 01 to 3

Synchronous clutch, Type 49...5.

Sizes 01 to 3

(B.4.14.EN)

Limit Switch Installation

The switching direction arrow on the housing lid of the mechanical limit switch faces in the direction of the adjusting nut (5) or in the thrust washer (3) stroke direction, Fig. 1. Adjust the switch distances for the contactless and mechanical limit switch acc. Fig. 14 or Fig. 15. The distance from the switching point to the thrust washer (3) can be finely adjusted using a hexagon head screw SW7 (Figs. 14 and 15).

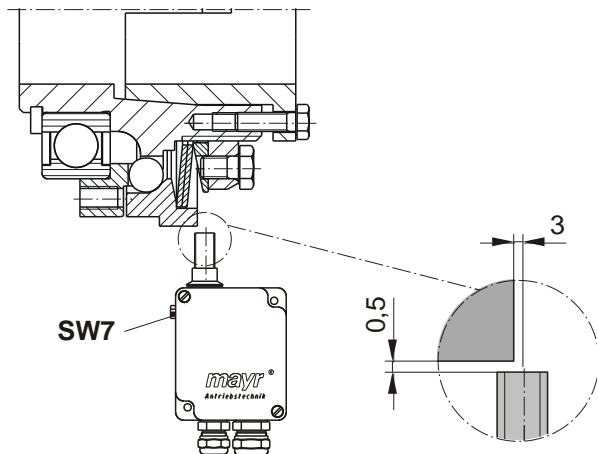


Fig. 14: contactless limit switch

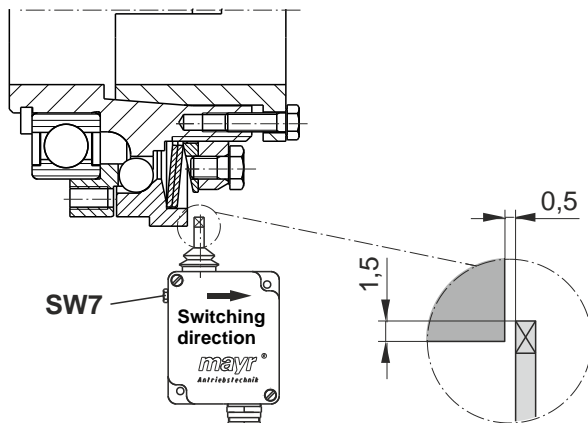


Fig. 15: mechanical limit switch

Maintenance and Maintenance Intervals

Maintenance work, which should be carried out after approx. 2000 operating hours, after 100 disengagements or at the latest after 1 year, includes:

- Visual inspection
- Functional inspection
- Inspection of the shaft-hub connection
- Inspection of the screw tightening torques
The specified tightening torques (Table 5) must be maintained.
- Inspection of the set torque
- Clutch release inspection
- Bearing or bearing pre-tension inspection
- Re-greasing of the transmission geometries, balls, recesses and sealing elements.

Clutch re-greasing must only be carried out by specially trained personnel.

For greasing, please use NLGI Class 1,5 grease with a basic oil viscosity of 460 mm²/s at 40 °C, e.g. Mobilith SHC460.

When re-installing the clutch, please secure all screws with Loctite 243 (medium hard).

If large amounts of dirt or dust are present or in extreme ambient conditions, it may well be necessary to carry out inspections at shorter intervals.

We recommend that maintenance work is carried out at the site of manufacture.

Disposal

Electronic components (Limit switch):

Products which have not been disassembled can be disposed of under Code No. 160214 (mixed materials) or components under Code No. 160216, or can be disposed of by a certified disposal firm.

Steel components:

Steel scrap (Code No. 160117)

All aluminium components:

Non-ferrous metals (Code No. 160118)

Seals, O-rings, V-seals, elastomers:

Plastic (Code No. 160119)

Installation and Operational Instructions for EAS[®]-Compact[®]

Ratchetting clutch, Type 49...0... Sizes 01 to 3

Synchronous clutch, Type 49...5... Sizes 01 to 3

(B.4.14.EN)

Malfunctions / Breakdowns Type 490..._..._

Malfunction	Possible Causes	Solutions
Premature clutch release	Incorrect torque adjustment	<ol style="list-style-type: none"> 1) Set the system out of operation 2) Check the torque adjustment 3) Secure the adjusting nut 4) If the cause of malfunction cannot be found, the clutch must be inspected at the place of manufacture
	Adjusting nut has changed position	
	Worn clutch	
Clutch does not release on overload	Incorrect torque adjustment	<ol style="list-style-type: none"> 1) Set the system out of operation 2) Check whether foreign bodies influence the disengagement mechanism function 3) Check the torque adjustment 4) Secure the adjusting nut 5) If the cause of malfunction cannot be found, the clutch must be inspected at the place of manufacture
	Adjusting nut has changed position	
	Worn clutch	
Running noises in normal operation	Insufficient clutch securement	<ol style="list-style-type: none"> 1) Set the system out of operation 2) Check the clutch securement 3) Check the screw tightening torques 4) Check the torque adjustment and that the adjusting nut sits securely 5) If the cause of malfunction cannot be found, the clutch must be inspected at the place of manufacture
	Loosened screws	
	Loosened adjusting nut	

Malfunctions / Breakdowns Type 493..._..._0

Malfunction	Possible Causes	Solutions
Steel bellows breakage	Incorrect alignment	<ol style="list-style-type: none"> 1) Set the system out of operation 2) Replace the entire clutch 3) Check the alignment
	Steel bellows have already been damaged in transport or during installation	<ol style="list-style-type: none"> 1) Set the system out of operation 2) Replace the entire clutch 3) Check the alignment
	Operating parameters are not appropriate for the clutch performance	<ol style="list-style-type: none"> 1) Set the system out of operation 2) Check the operating parameters and select a suitable clutch (observe installation space) 3) Install a new clutch 4) Check the alignment
	Steel bellows is energised in natural frequency; resonance	<ol style="list-style-type: none"> 1) Set the system out of operation 2) Re-align the line characteristics 3) Replace the entire clutch 4) Check the alignment
Changes in running noise and / or vibration occurrence	Loosened screws, resonances, insufficient clutch securement	<ol style="list-style-type: none"> 1) Set the system out of operation 2) Check the screw tightening torques 3) Check the line characteristics 4) Check the clutch parts and replace if damaged

Installation and Operational Instructions for EAS[®]-Compact[®]

Ratchetting clutch, Type 49...0... Sizes 01 to 3

Synchronous clutch, Type 49...5... Sizes 01 to 3

(B.4.14.EN)

Malfunctions / Breakdowns Type 494... ..

Malfunction	Possible Causes	Solutions
Changes in running noise and / or vibration occurrence	Incorrect alignment	<ol style="list-style-type: none"> 1) Set the system out of operation 2) Find / resolve the cause of incorrect alignment (e. g. loose foundation screws, motor securement breakage, heat expansion of system components, changes in the coupling distance dimension "E") 3) Check the clutch for wear
	Wear on the elastomeric element, temporary torque transmission due to metal contact	<ol style="list-style-type: none"> 1) Set the system out of operation 2) Dismantle the clutch and remove the remainders of the elastomeric element 3) Check the clutch parts and replace if damaged 4) Insert a new elastomeric element, install clutch components 5) Check the alignment and correct if necessary.
	Tensioning and clamping screws or locking set screw for axial hub securement or connection screws are loose	<ol style="list-style-type: none"> 1) Set the system out of operation 2) Check the clutch alignment 3) Tighten the tensioning and clamping screws for axial hub securement and the connection screws to the required torque or tighten the locking set screw and secure it against self-loosening using sealing lacquer 4) Check the clutch for wear
Cam breakage	Wear on the elastomeric element, torque transmission due to metal contact	<ol style="list-style-type: none"> 1) Set the system out of operation 2) Replace the entire clutch 3) Check the alignment
	Cam breakage due to high impact energy / overload / excessively high shaft misalignments	<ol style="list-style-type: none"> 1) Set the system out of operation 2) Replace the entire clutch 3) Check the alignment 4) Find the cause of overload
	Operating parameters are not appropriate for the clutch performance	<ol style="list-style-type: none"> 1) Set the system out of operation 2) Check the operating parameters and select a suitable clutch (observe installation space) 3) Install a new clutch 4) Check the alignment
	Operational mistakes due to clutch characteristic data being exceeded	<ol style="list-style-type: none"> 1) Set the system out of operation 2) Check clutch dimensioning 3) Replace the entire clutch 4) Check the alignment 5) Train and advise operating personnel
Premature wear on the elastomeric element	Incorrect alignment	<ol style="list-style-type: none"> 1) Set the system out of operation 2) Find / resolve the cause of incorrect alignment (e. g. loose foundation screws, motor securement breakage, heat expansion of system components, changes in the coupling distance dimension "E") 3) Check the clutch for wear 4) Insert a new elastomeric element

Installation and Operational Instructions for EAS[®]-Compact[®]

Ratchetting clutch, Type 49...0... Sizes 01 to 3

Synchronous clutch, Type 49...5... Sizes 01 to 3

(B.4.14.EN)

Malfunctions / Breakdowns Type 494... (continued)

Malfunction	Possible Causes	Solutions
Premature wear on the elastomeric element	e.g. contact with aggressive liquids / oils, ozone influences, excessively high ambient temperature etc., which lead to physical changes in the elastomeric element	<ol style="list-style-type: none"> 1) Set the system out of operation 2) Dismantle the clutch and remove the remainders of the elastomeric element 3) Check the clutch parts and replace if damaged 4) Insert a new elastomeric element, install clutch components 5) Check the alignment and correct if necessary. 6) Make sure that further physical changes to the elastomeric element can be ruled out
	The ambient or contact temperatures permitted for the elastomeric element are exceeded	<ol style="list-style-type: none"> 1) Set the system out of operation 2) Dismantle the clutch and remove the remainders of the elastomeric element 3) Check the clutch parts and replace if damaged 4) Insert a new elastomeric element, install clutch components 5) Check the alignment and correct if necessary. 6) Check the ambient or contact temperature and regulate them (if necessary, use other elastomeric element materials)
Premature wear on the elastomeric element (material liquitation inside the elastomeric element toothing)	Drive vibrations	<ol style="list-style-type: none"> 1) Set the system out of operation 2) Dismantle the clutch and remove the remainders of the elastomeric element 3) Check the clutch parts and replace if damaged 4) Insert a new elastomeric element, install clutch components 5) Check the alignment and correct if necessary. 6) Find the cause of vibration (if necessary, use an elastomeric element with a lower or higher shore hardness)

Installation and Operational Instructions for EAS[®]-Compact[®]

Ratchetting clutch, Type 49...0... Sizes 01 to 3

Synchronous clutch, Type 49...5... Sizes 01 to 3

(B.4.14.EN)

Malfunctions / Breakdowns Type 496...0

Malfunction	Possible Causes	Solutions
Changes in running noise and / or vibration occurrence	Incorrect alignment, incorrect installation	<ol style="list-style-type: none"> 1) Set the system out of operation 2) Find / resolve the cause of incorrect alignment 3) Check the clutch for wear
	Loose connecting screws, minor fretting corrosion under the screw head and on the disk pack	<ol style="list-style-type: none"> 1) Set the system out of operation 2) Check the clutch parts and replace if damaged 3) Tighten the connecting screws to the specified torque 4) Check the alignment and correct if necessary
	Tensioning screws or locking set screw for axial securement of the hubs are loose	<ol style="list-style-type: none"> 1) Set the system out of operation 2) Check the clutch alignment 3) Tighten the tensioning and clamping screws for axial hub securement to the required torque or tighten the locking set screw and secure it against self-loosening using sealing lacquer 4) Check the clutch for wear
Disk pack breakage	Disk pack breakage due to high load impacts / overload	<ol style="list-style-type: none"> 1) Set the system out of operation 2) Dismantle the clutch and remove the remainders of the disk packs 3) Check the clutch parts and replace if damaged 4) Find the cause of overload and remove it
	Operating parameters are not appropriate for the clutch performance	<ol style="list-style-type: none"> 1) Set the system out of operation 2) Check the operating parameters and select a suitable clutch (observe installation space) 3) Install a new clutch 4) Check the alignment
	Incorrect operation of the system unit	<ol style="list-style-type: none"> 1) Set the system out of operation 2) Dismantle the clutch and remove the remainders of the disk packs 3) Check the clutch parts and replace if damaged 4) Train and advise operating personnel
Disk packs / connecting screws cracks or breakage	Drive vibrations	<ol style="list-style-type: none"> 1) Set the system out of operation 2) Dismantle the clutch and remove the remainders of the disk packs 3) Check the clutch parts and replace if damaged 4) Check the alignment and correct if necessary 5) Find the cause of vibration and remove it



Please Observe!

mayr[®] will take no responsibility or guarantee for replacement parts and accessories which have not been delivered by mayr[®], or for damage resulting from the use of these products.